





**INSTALLATION MANUAL  
BREEZE DAYBED  
(SF-3406-202 IM)**

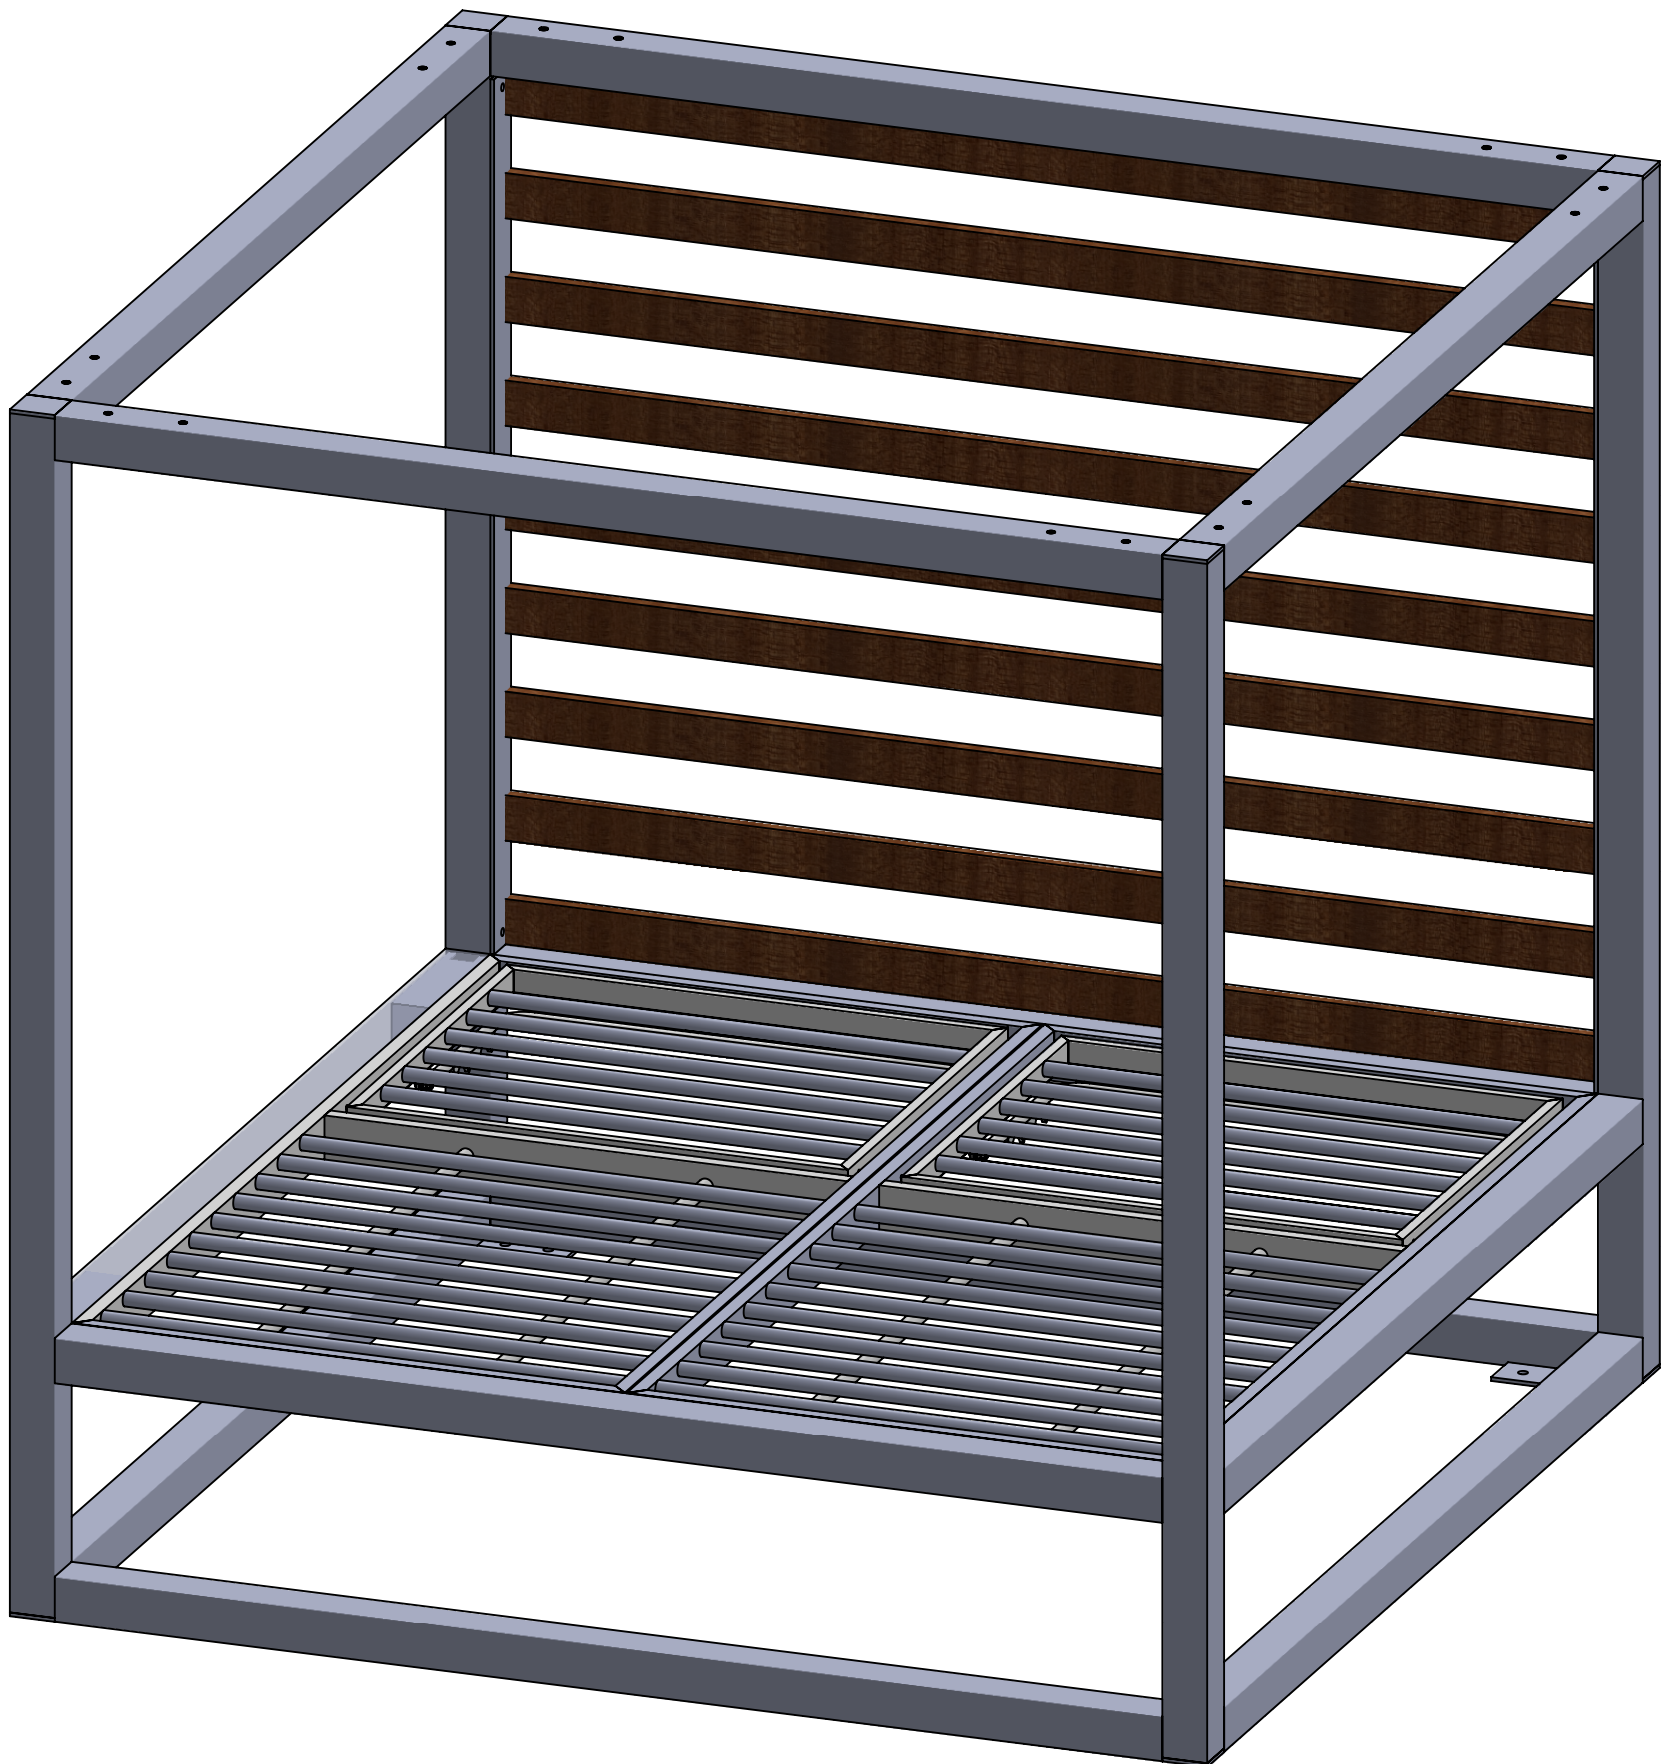

NOTES  
- GROUND ANCHOR BOLTS NOT INCLUDED.




INSTALLATION MANUAL  
BREEZE DAYBED  
(SF-3406-202 IM)

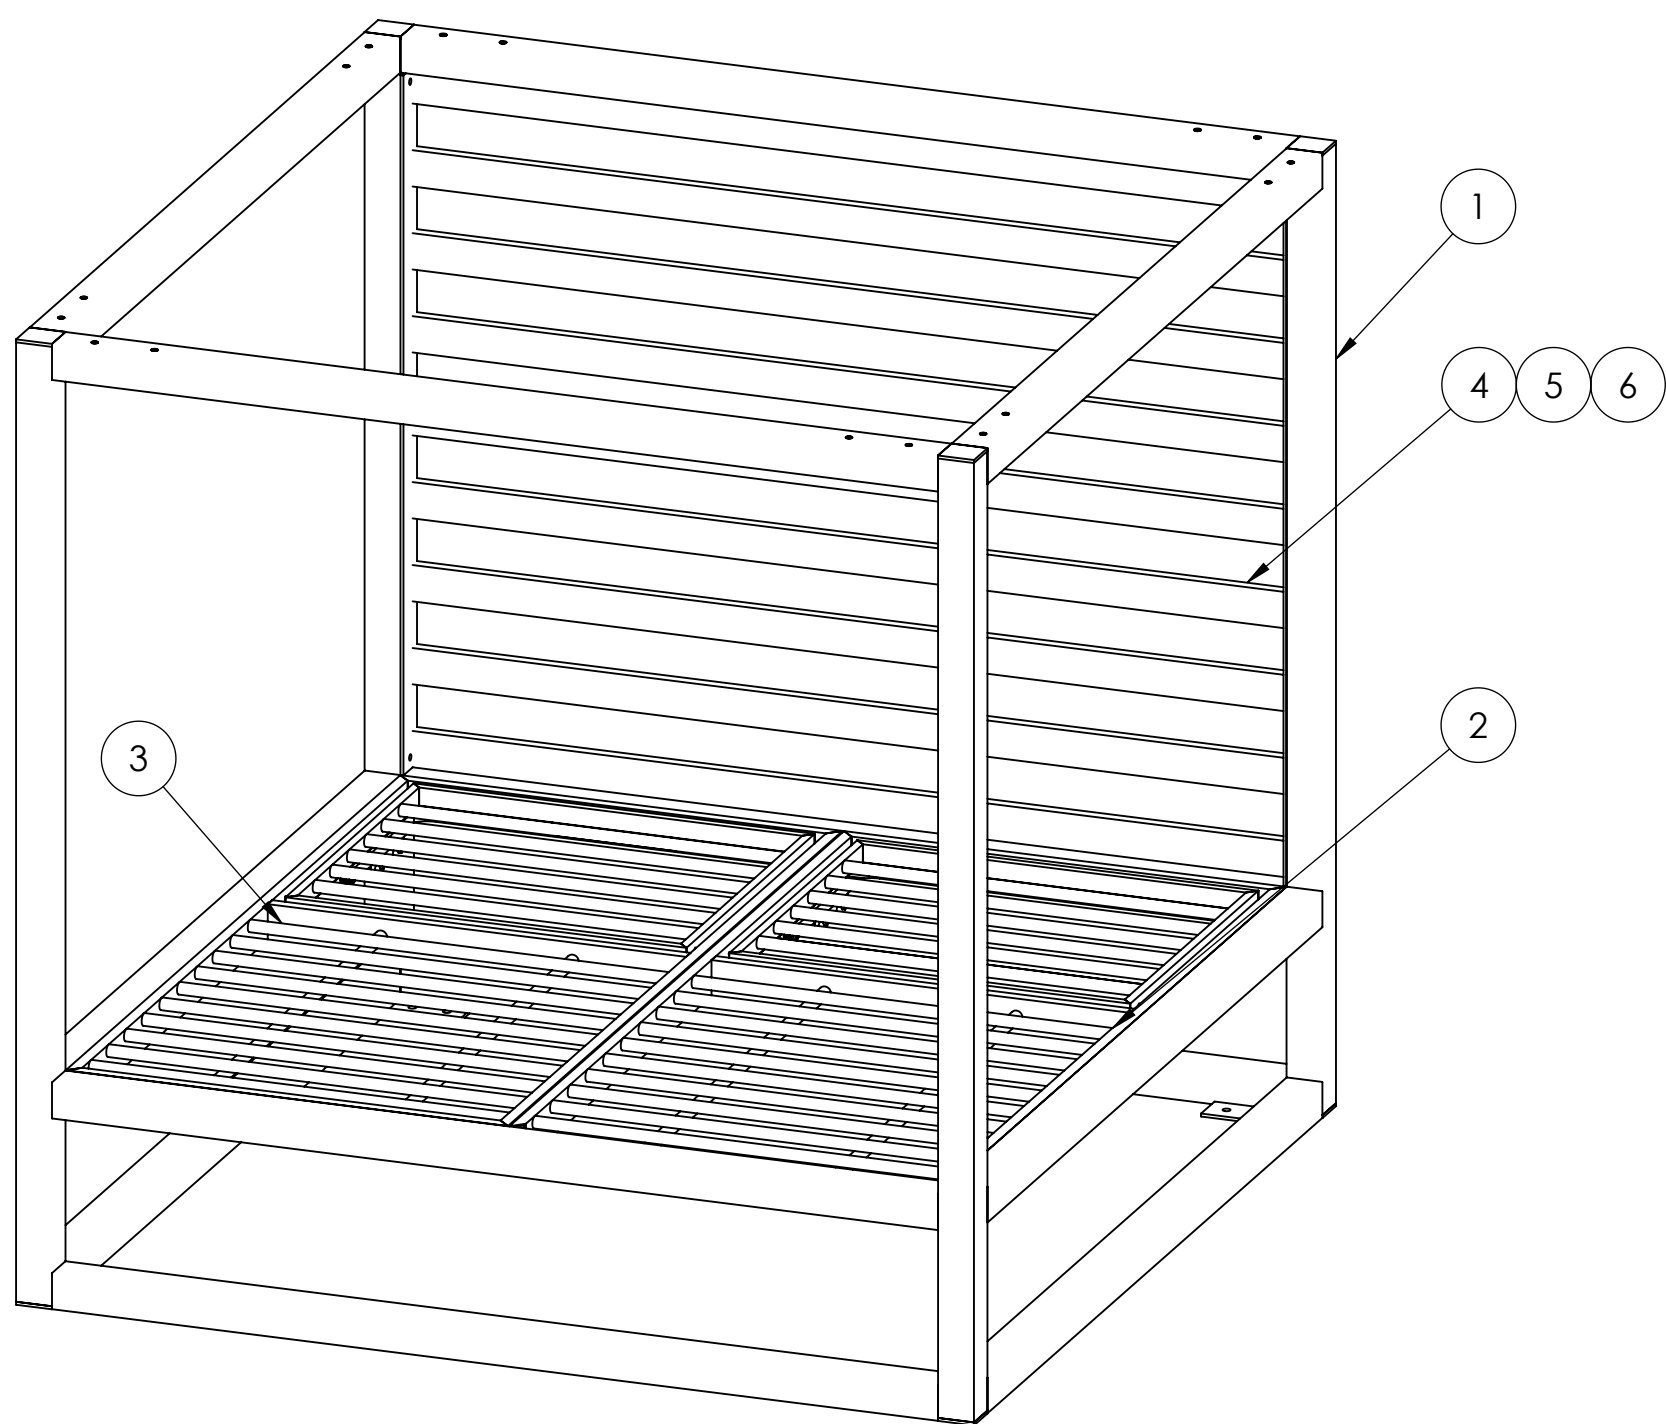

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	SF-3406-202-A01	BREEZE DAYBED FRAME	1
2	SF-3406-202-A03	BREEZE RIGHT BED	1
3	SF-3406-202-A04	BREEZE LEFT BED	1
4	SF-3406-202-P24	BRACKET	9
5	SF-3406-202-P23	BRACKET	18
6	SF-3406-202-P22	LATERAL PLATE	2
7	HARDWARE	FHCS 1/4-20 X 1" LG	48
8	HARDWARE	FLAT WASHER ID 1/4"	4
9	HARDWARE	BHCS 1/4-20 X ¾" LG	4


# DECO SCAPE

## INSTALLATION MANUAL BREEZE DAYBED (SF-3406-202 IM)

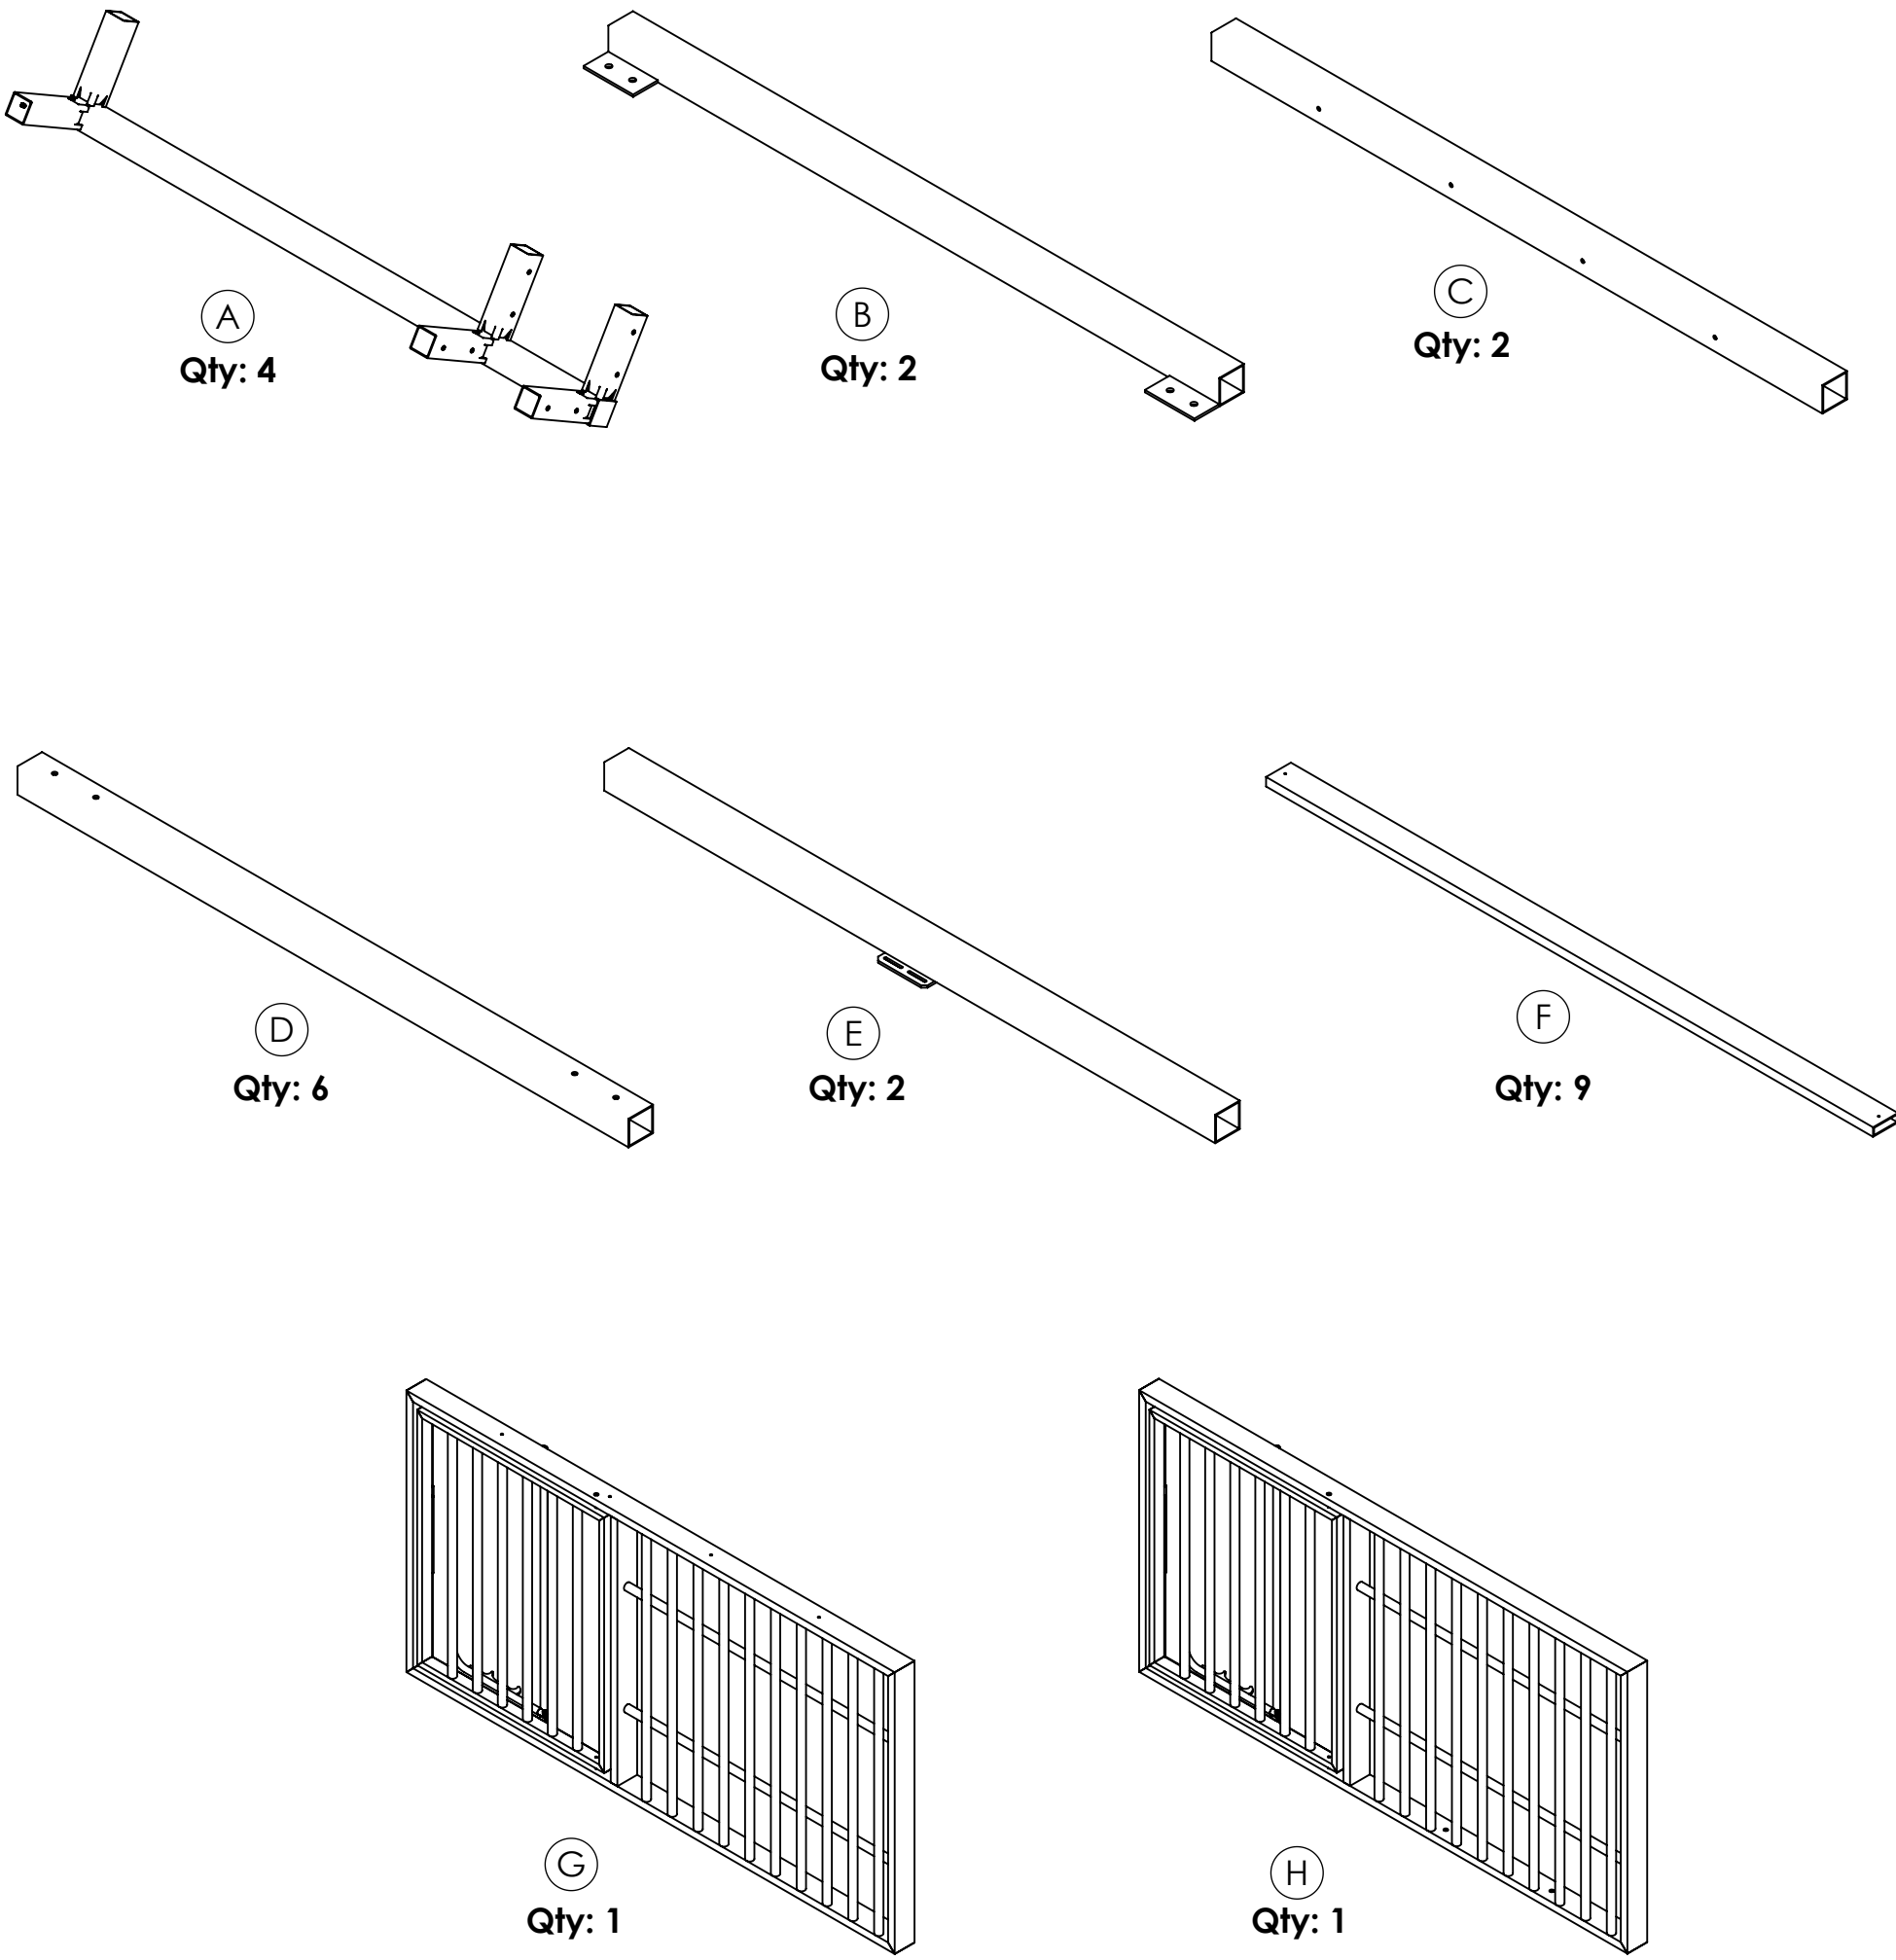





# INSTALLATION MANUAL BREEZE DAYBED (SF-3406-202 IM)

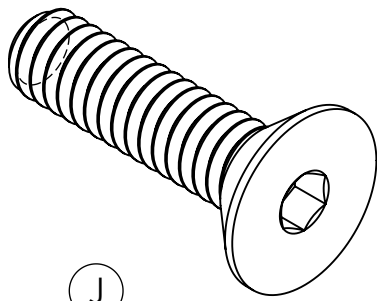

J  
Qty: 40

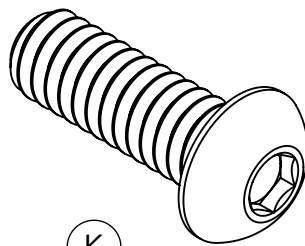


K  
Qty: 4

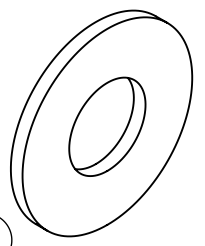

L  
Qty: 4



## INSTALLATION MANUAL BREEZE DAYBED (SF-3406-202 IM)

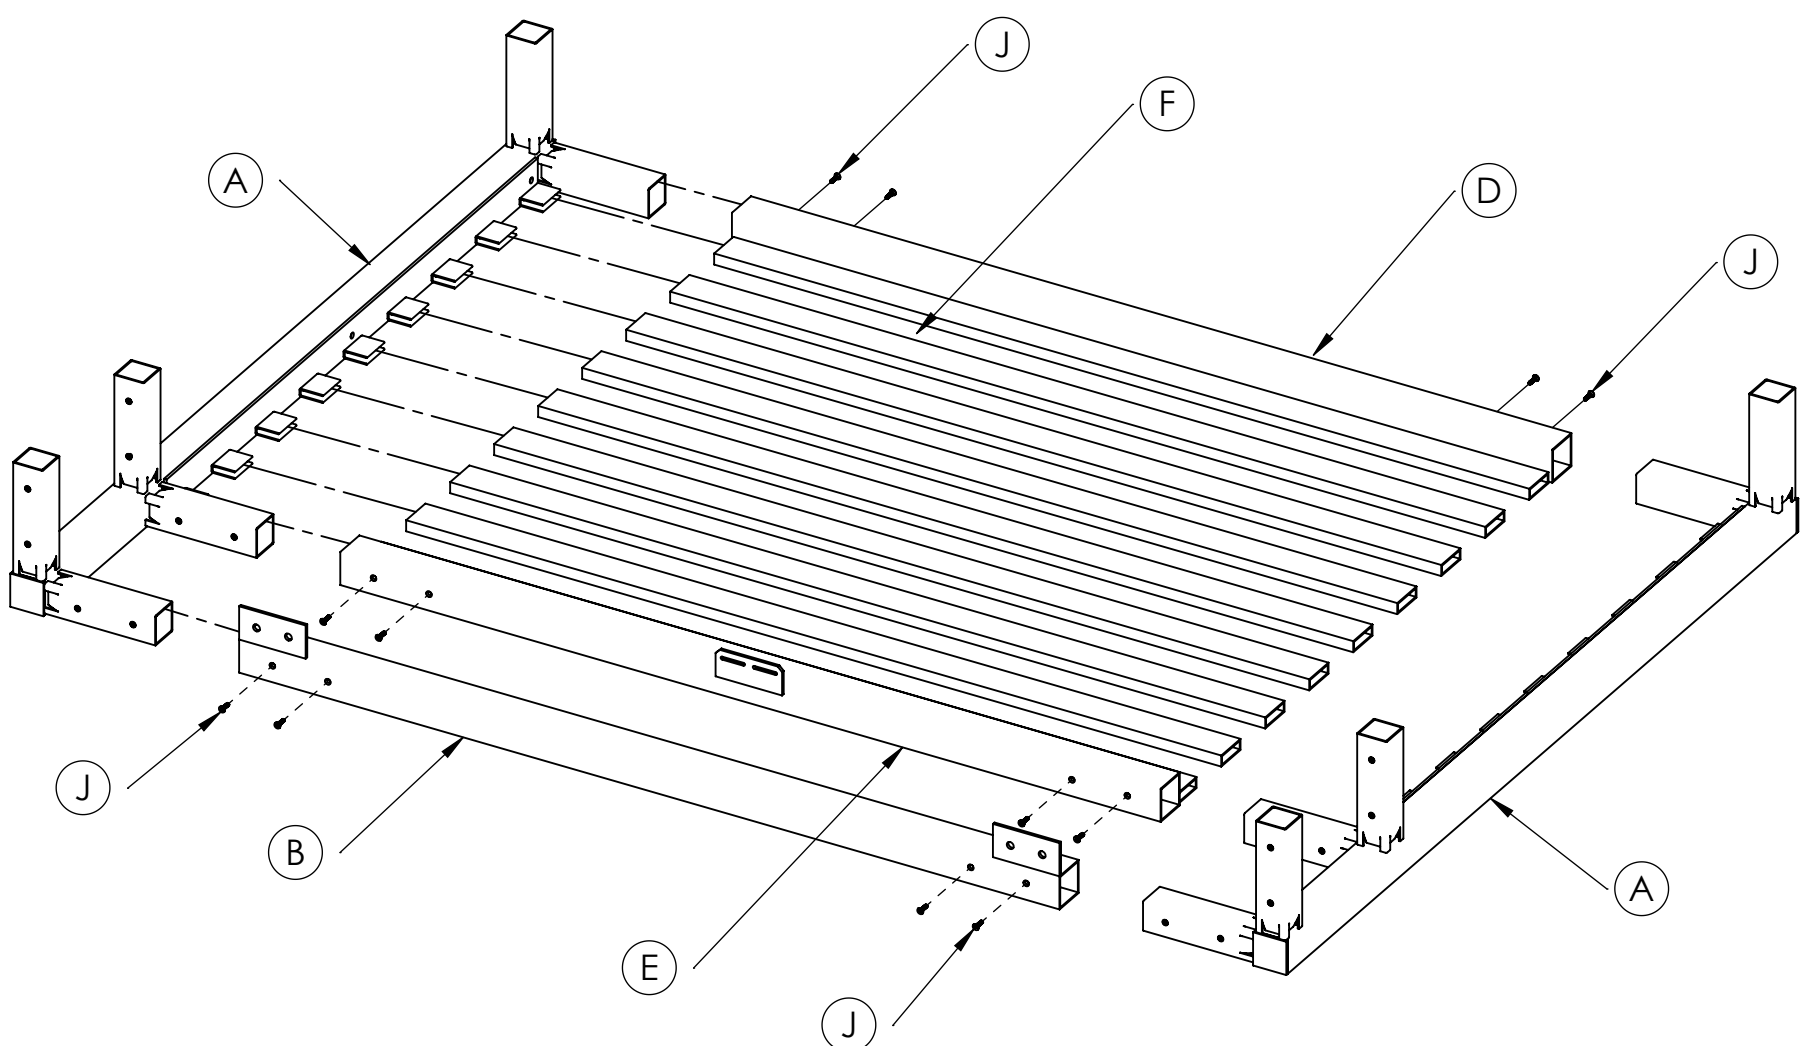


### STEP 1

- CLEAN WORK AREA MAKING SURE FLOOR IS FREE OF DIRT AND DABRIS.
- PLACE LARGE CLOTH ON FLOOR TO PROTECT DAYBED FROM SCRATCHES.
- LAYOUT PARTS AS SHOWN, SLID (X) INTO OPENING ON OPPOSITE SIDE AND SECURE WITH FLAT HEAD SCREW 1/4"-20 X 1" AND TIGHTEN. (AS SHOWN)
- STAND UP RIGHT.



# INSTALLATION MANUAL BREEZE DAYBED (SF-3406-202 IM)

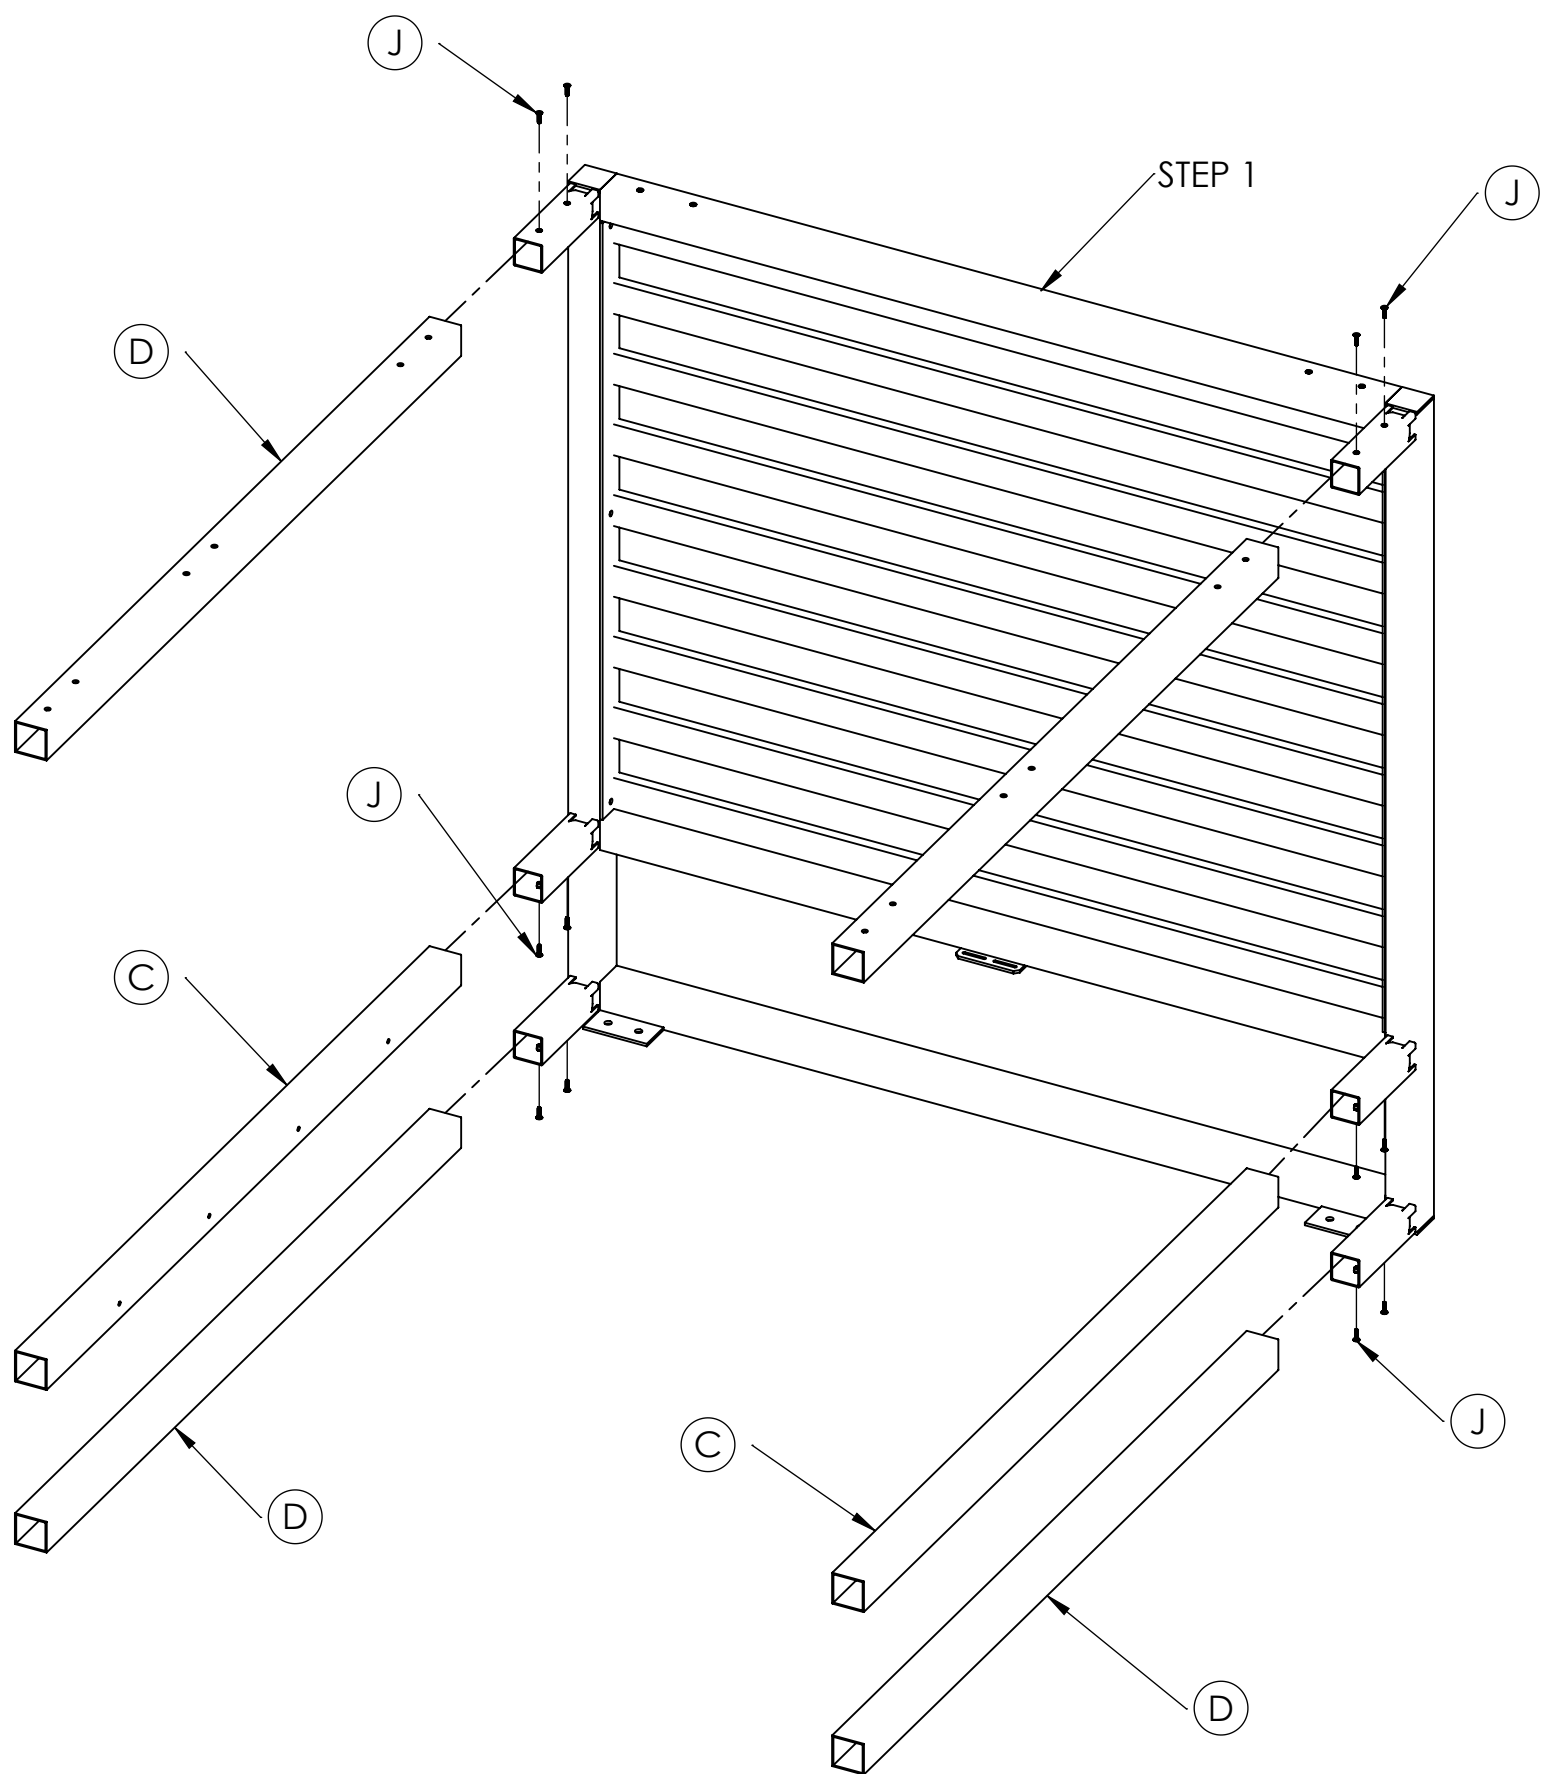


## STEP 2

-ATTACH SIDE REALS (X) WITH FLAT HEAD SCREW 1/4"-20 X 1" AND TIGHTEN. (AS SHOWN)



## INSTALLATION MANUAL BREEZE DAYBED (SF-3406-202 IM)

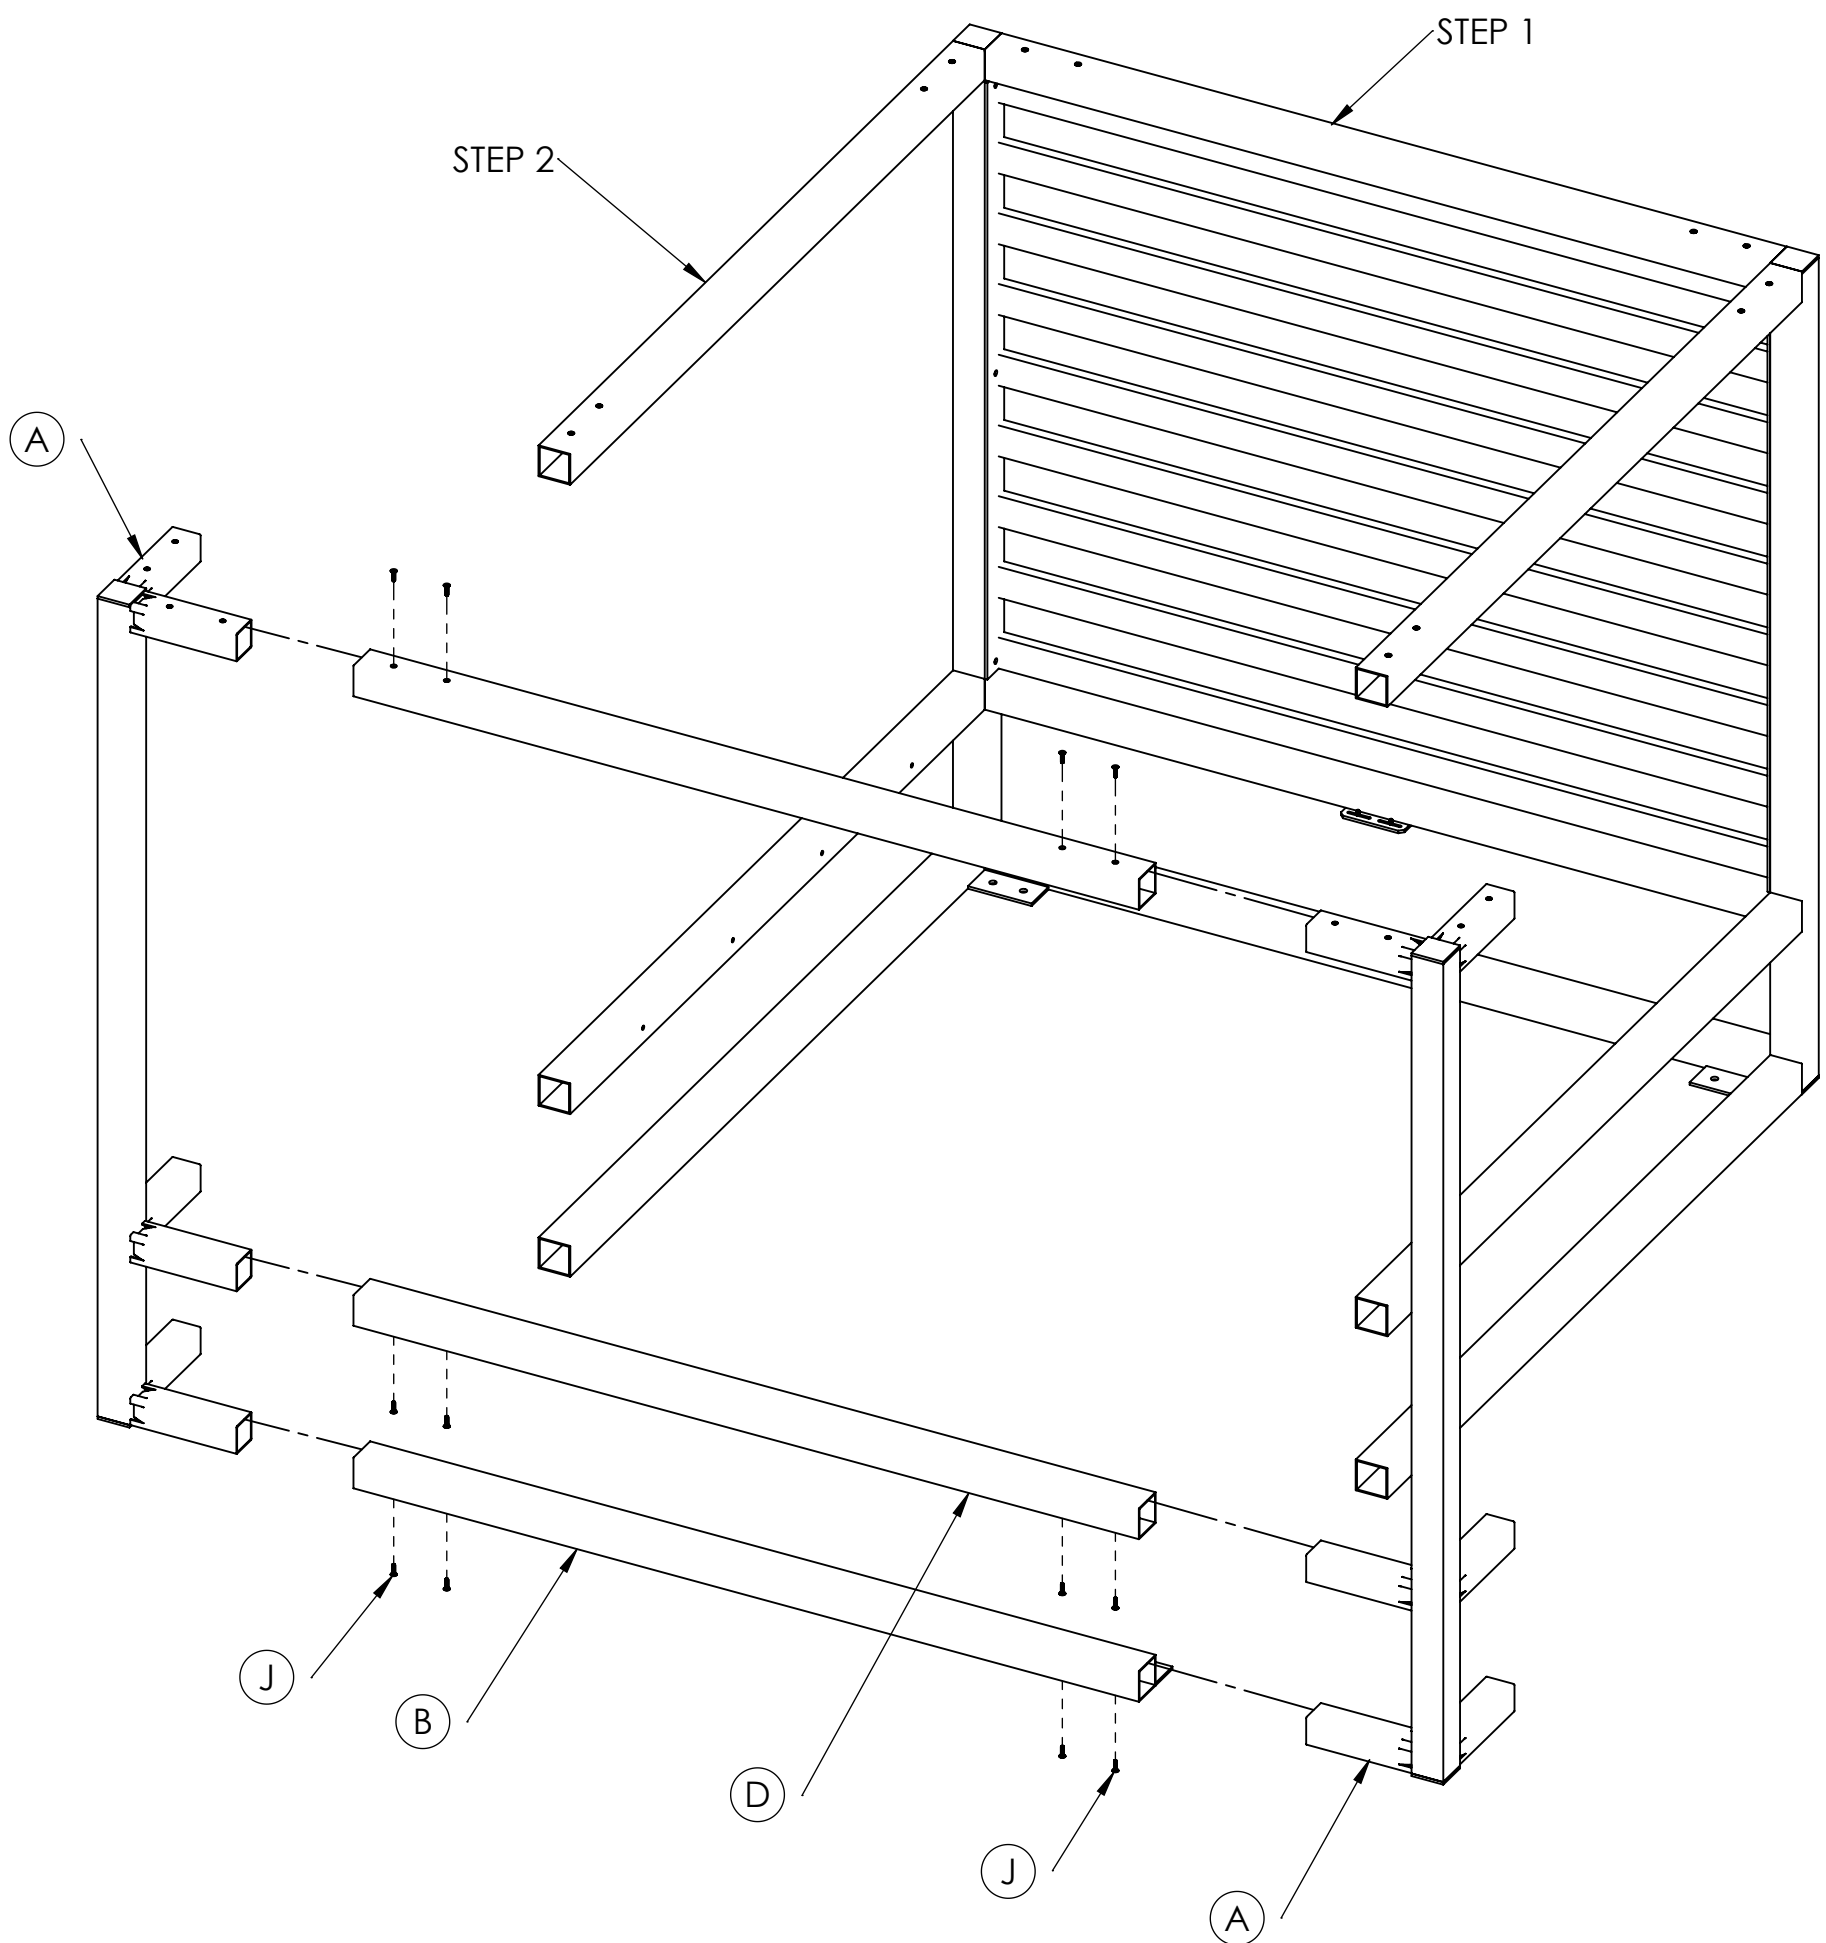


### STEP 3

- REPEAT STEP 1 FOR FRONT WALL ASSEMBLY
- ATTACH WITH FLAT HEAD SCREW 1/4"-20 X 1" AND TIGHTEN. (AS SHOWN)





## INSTALLATION MANUAL BREEZE DAYBED (SF-3406-202 IM)

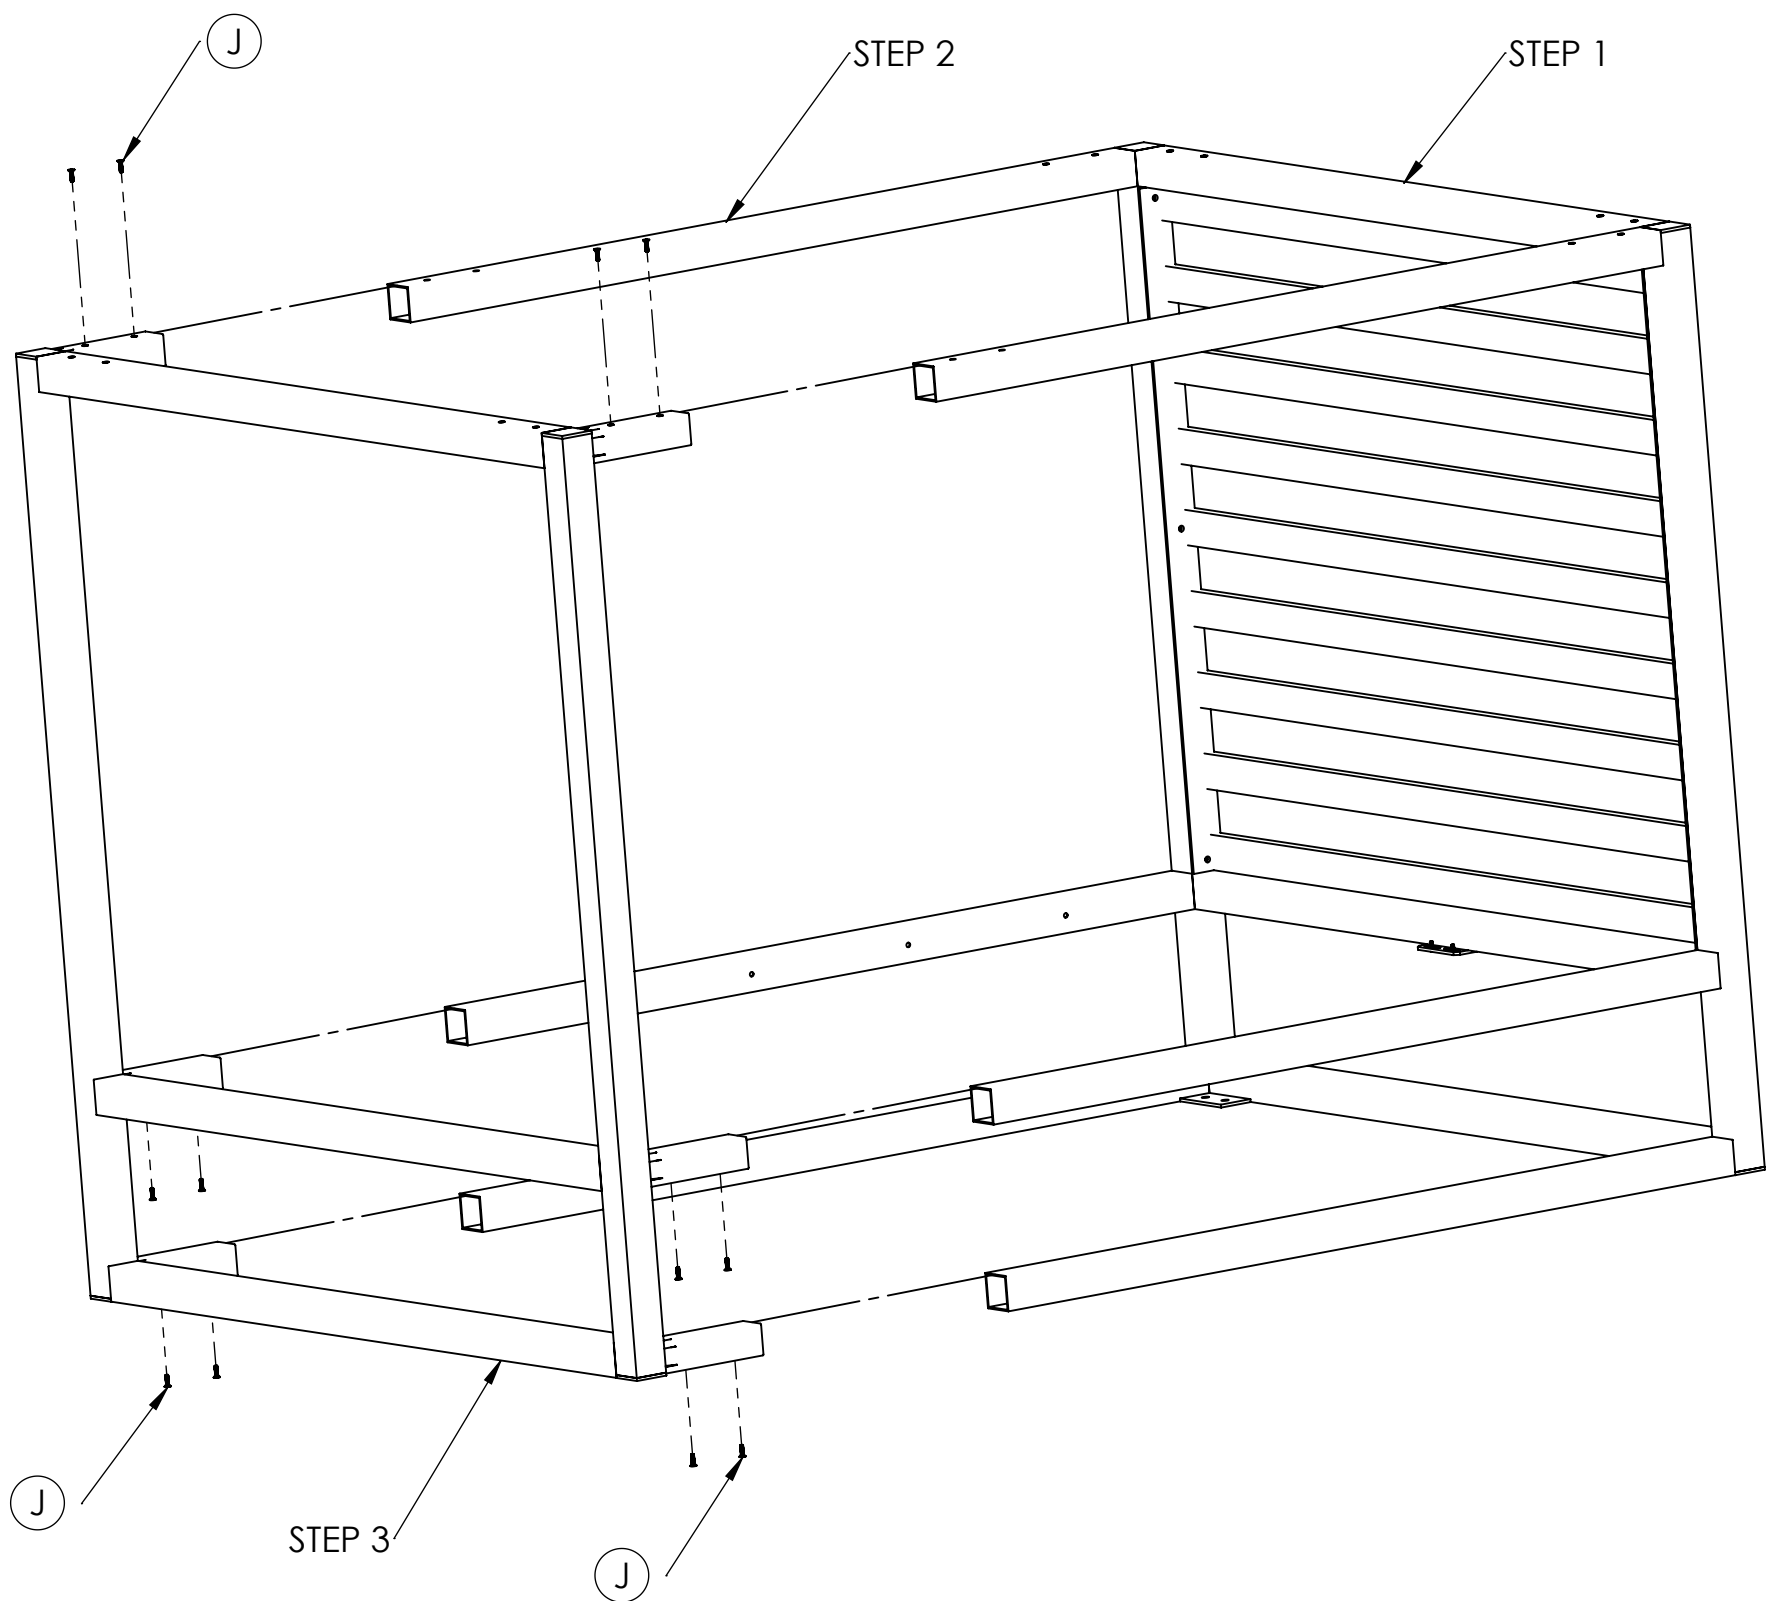


### STEP 4

- ATTACH FRONT WALL WITH FLAT HEAD SCREW 1/4"-20 X 1" AND TIGHTEN. (AS SHOWN)






## INSTALLATION MANUAL BREEZE DAYBED (SF-3406-202 IM)

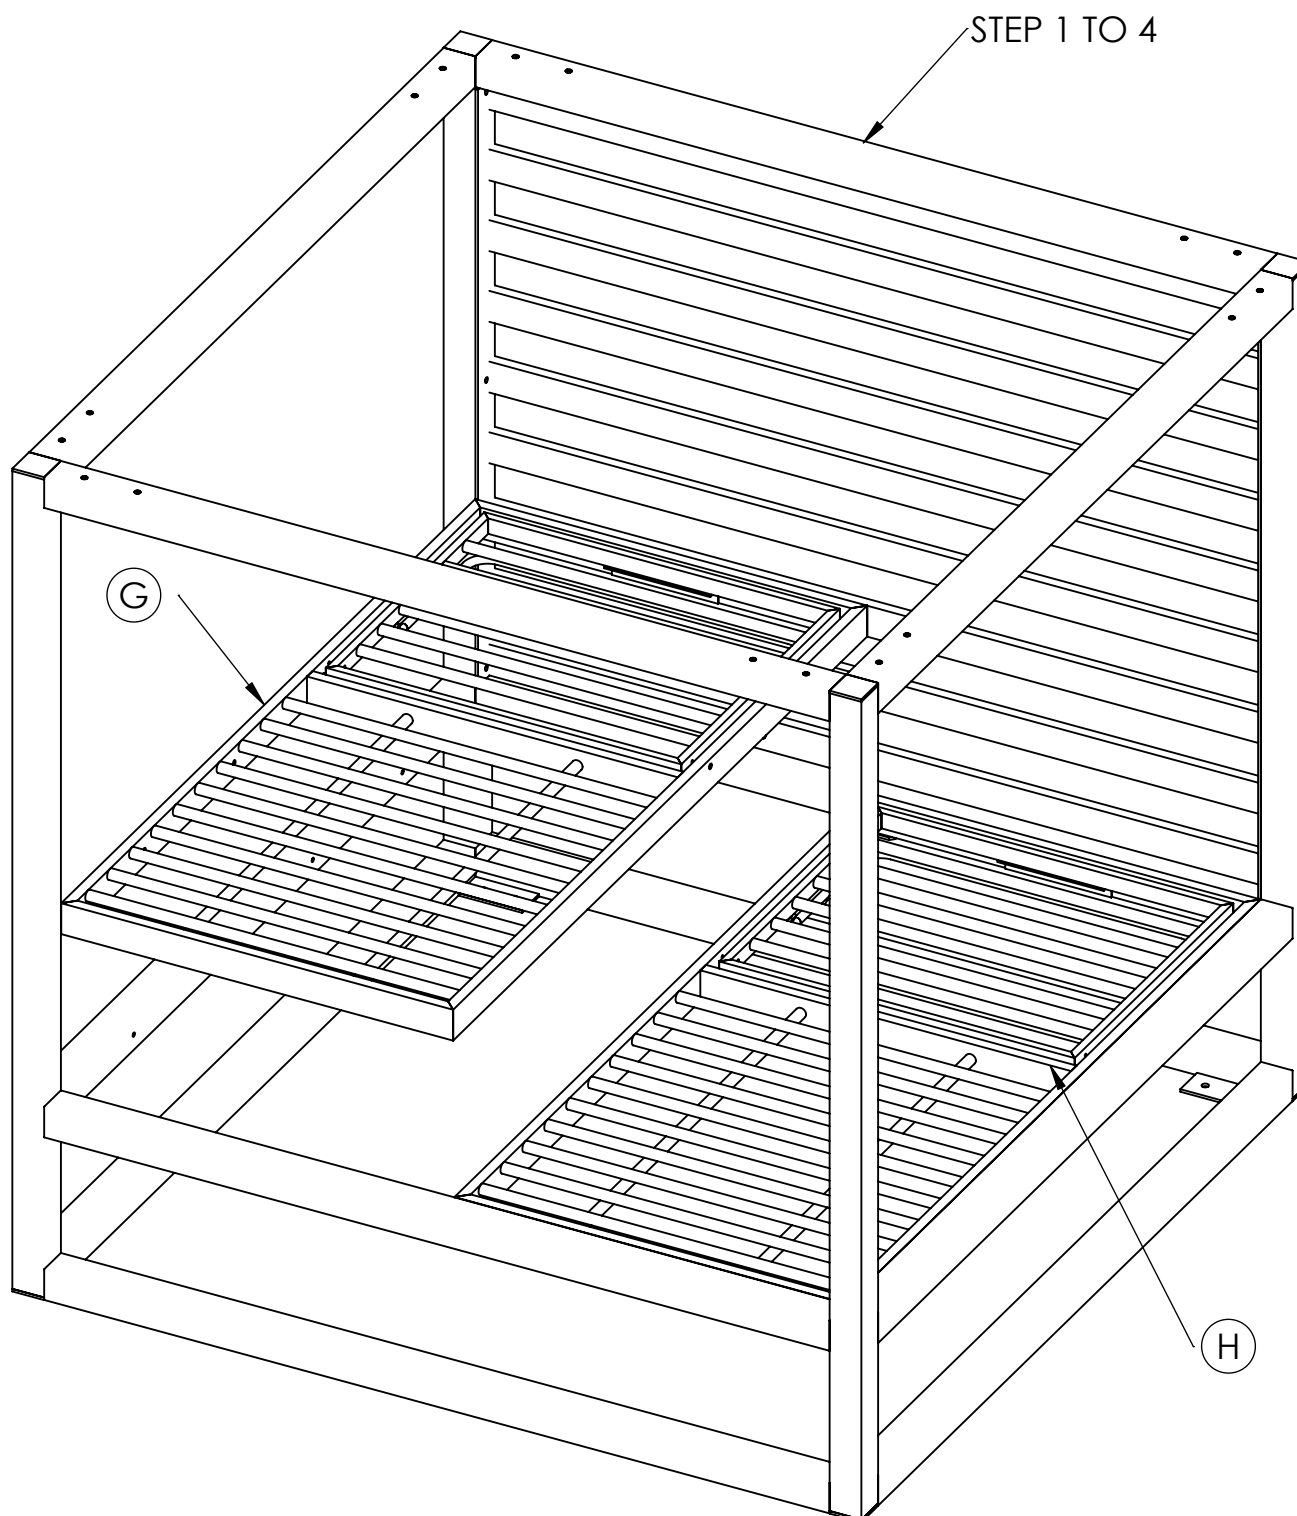

### STEP 5

- ATTACH BED FRAME WITH BOTTON HEAD HEX SCREW 1/4"-20 X 3/4" Lg AND WASHER 1/4"-20 AND TIGHTEN.
- ATTACH BED FRAME TO SIDE RAILS WITH BOTTON HEAD HEX SCREW 1/4"-20 X 1" LG

**DECOSCAPE RECOMMENDED ANCHOR:  
RED HED WEDGE ANCHOR,  
2-1/4" OVERALL LG, 1/4" DIA, 1/4-20 THREAD SIZE**

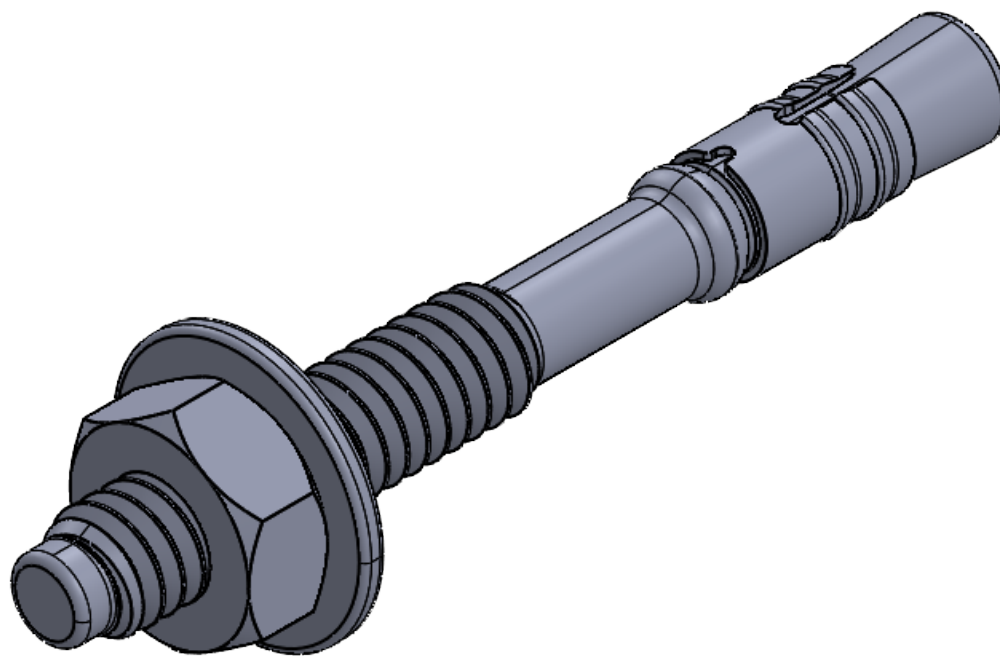

PART NUMBER: 15X085  
MFR MODEL: SWW-1422

NOTE: (4) REQUIRED PER LEG.  
WEDGE ANCHOR NOT SUPPLIED BY DECOSCAPE.  
INSTALLER MUST VERIFY LOCAL AND STATE REQUIREMENTS  
OF WEDGE ANCHOR BEFORE INSTALLATION.