



INSTALLATION MANUAL OASIS VENTED CABANA 10' X 10" (SF-3801-656-10 IM)

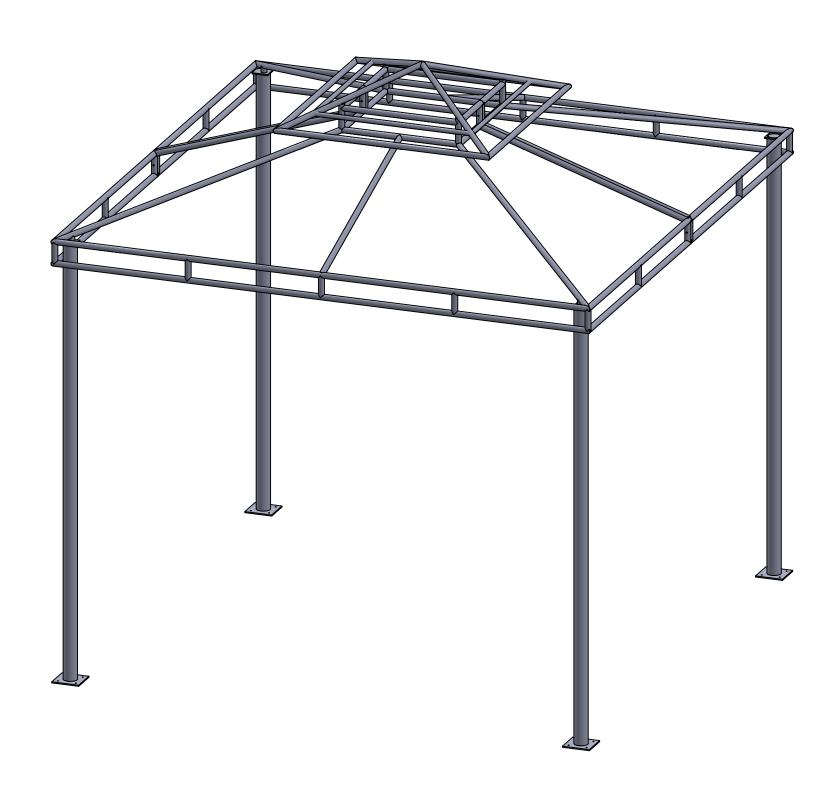




SF-3801-656-10 IM OASIS VENTED CABANA 10' X 10"

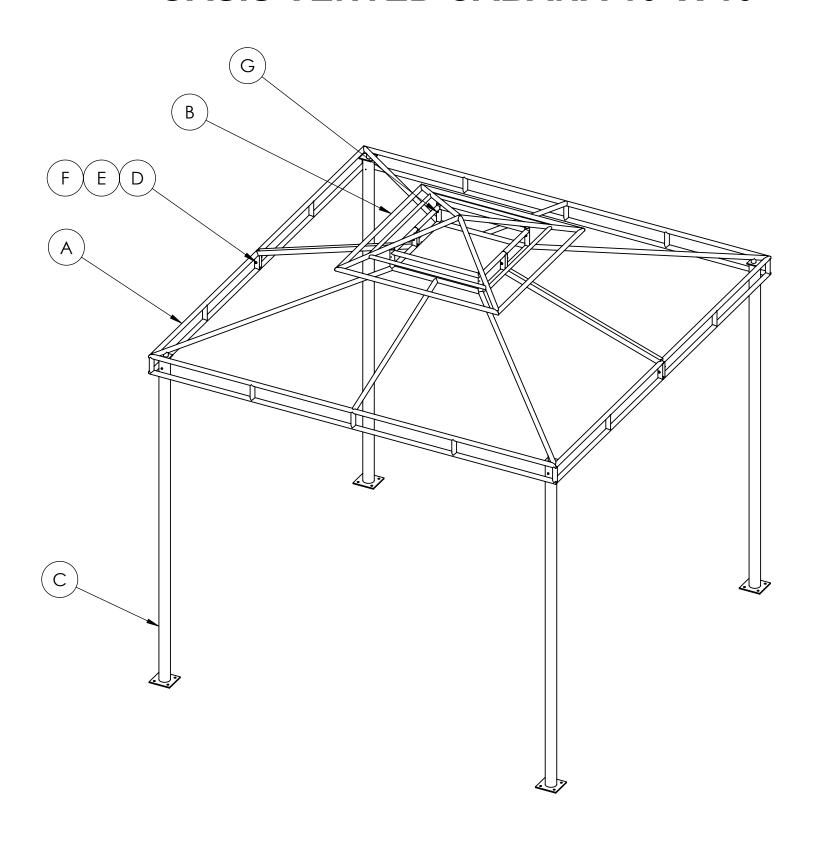

G	HARDWARE	HHDS #10 X 1" LG	8
F	HARDWARE	LOCK NUT 1/4-20	4
Е	HARDWARE	FLAT WASHER FOR SCREW Ø1/4"	4
D	HARDWARE	BHCS 1/4-20 X 3/4" LG	4
С	SF-3801-656-10-A03	VERTICAL POST	4
В	SF-3801-656-10-A02	COPULA	1
Α	SF-3801-656-10-A01	CABANA ROOF (10' X 10'')	2
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.



OASIS VENTED CABANA 10' X 10" (SF-3801-656-10 IM)

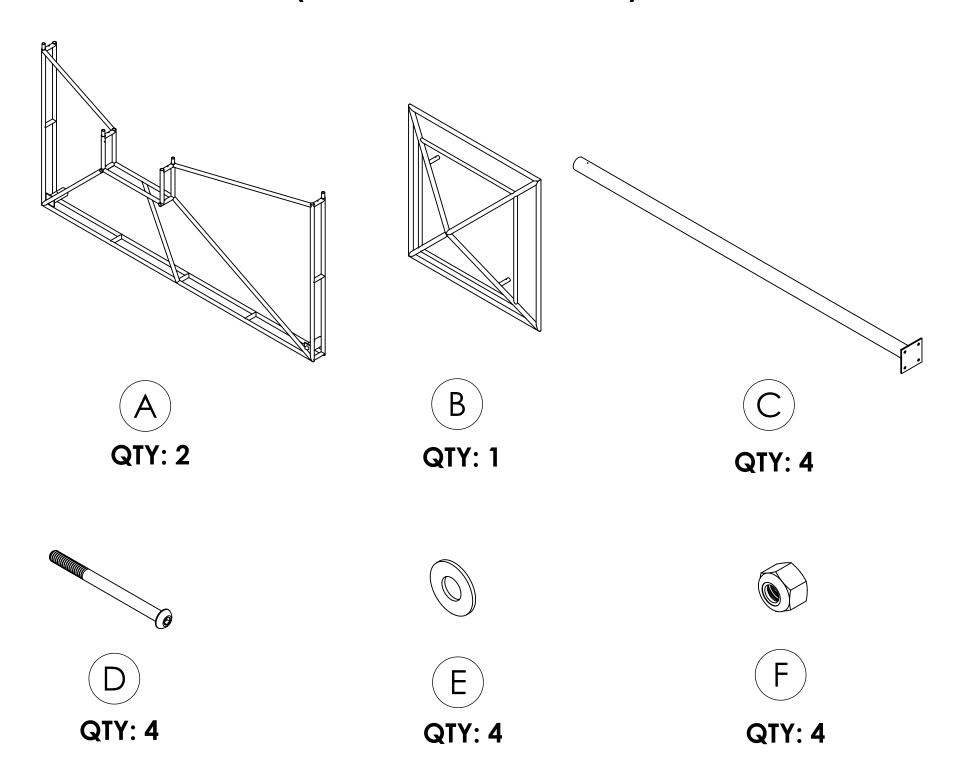






QTY: 8

NOTE:

- BEFORE ASSEMBLING VENTED ROOF CABANA CLEAN SURFACE AREA AND MAKE SURE TO PLACE A CARDBOARD OR CLOTH ON THE FLOOR AS NOT TO SCRACH FLOORS.
- MAKE SURE ANCHOR SCREWS HAVE BEEN INSERTED IN GROUND. (ANCHORS NOT INCLUDED UNLESS REQUESTED)



OASIS VENTED CABANA 10' X 10" (SF-3801-656-10 IM) STEP 1

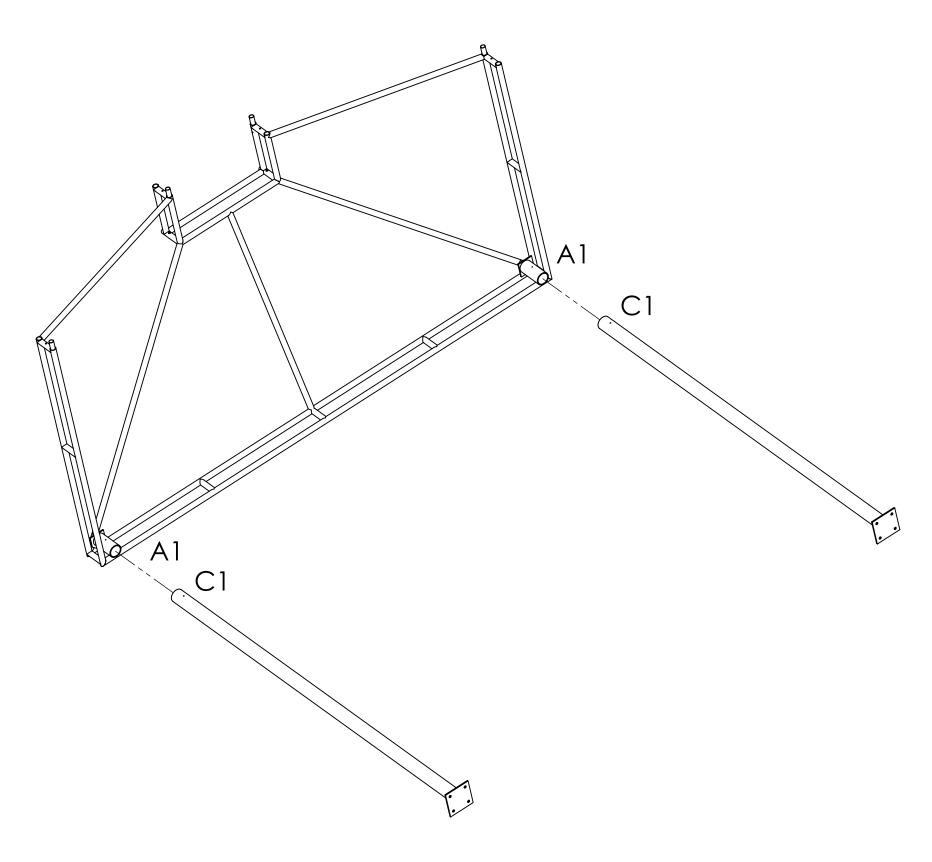


TO BEGIN ASSMBLY:

- PLACE ITEM (A) ON IT'S SIDE, WHERE THE OPEN END IS ON TOP.
- PLACE ITEM (C) ON IT'S SIDE, WHERE THE ANCHOR PLATE IS ON IT'S SIDE.
- INSERT A1 ON TO C1. (AS SHOWN)
- LOCATE SCREW HOLES AND PLACE HHDS #10 X 1" LG IN HOLE AND TIGHTEN.
- REPEAT THIS STEPS FOR THE SECOND ROOF ASSEMBLY.



OASIS VENTED CABANA 10' X 10" (SF-3801-656-10 IM)

STEP 2

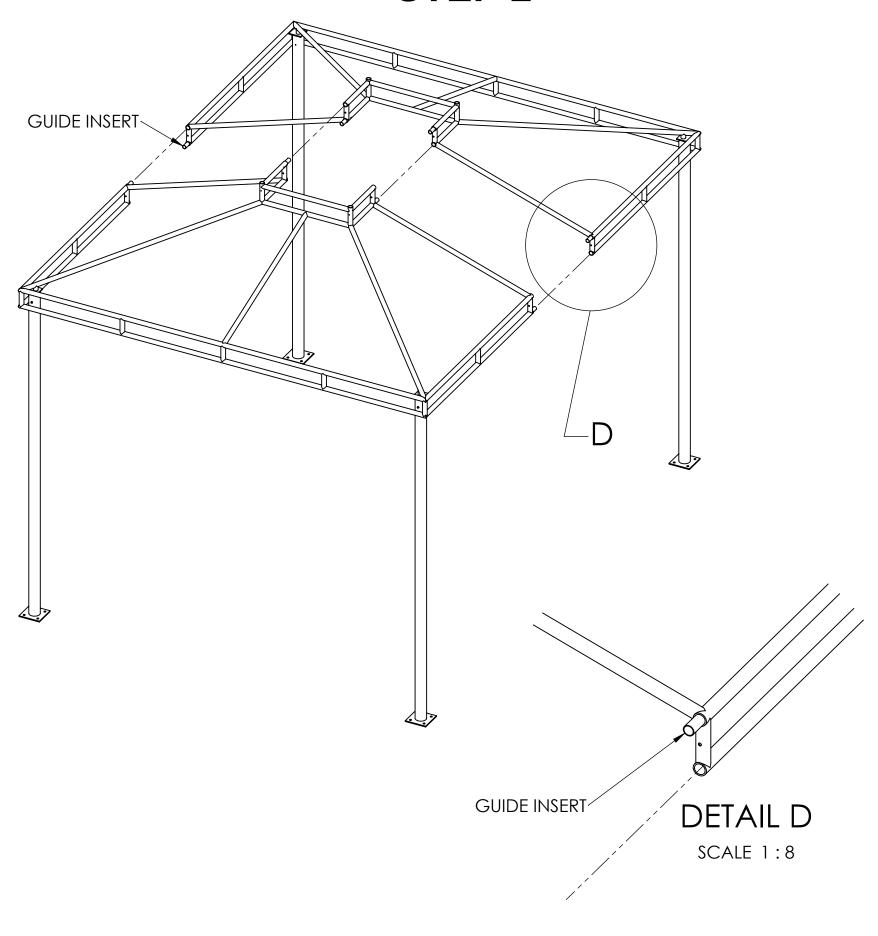


NOTE:

- LINE UP BOTH HALVES BY LINING UP GUIDE INSERTS AT THE TOP OF ITEM (A) AND INSERTING THEM IN THERE PROPER LOCATION. (AS SHOWN)



OASIS VENTED CABANA 10' X 10" (SF-3801-656-10 IM)

STEP 3

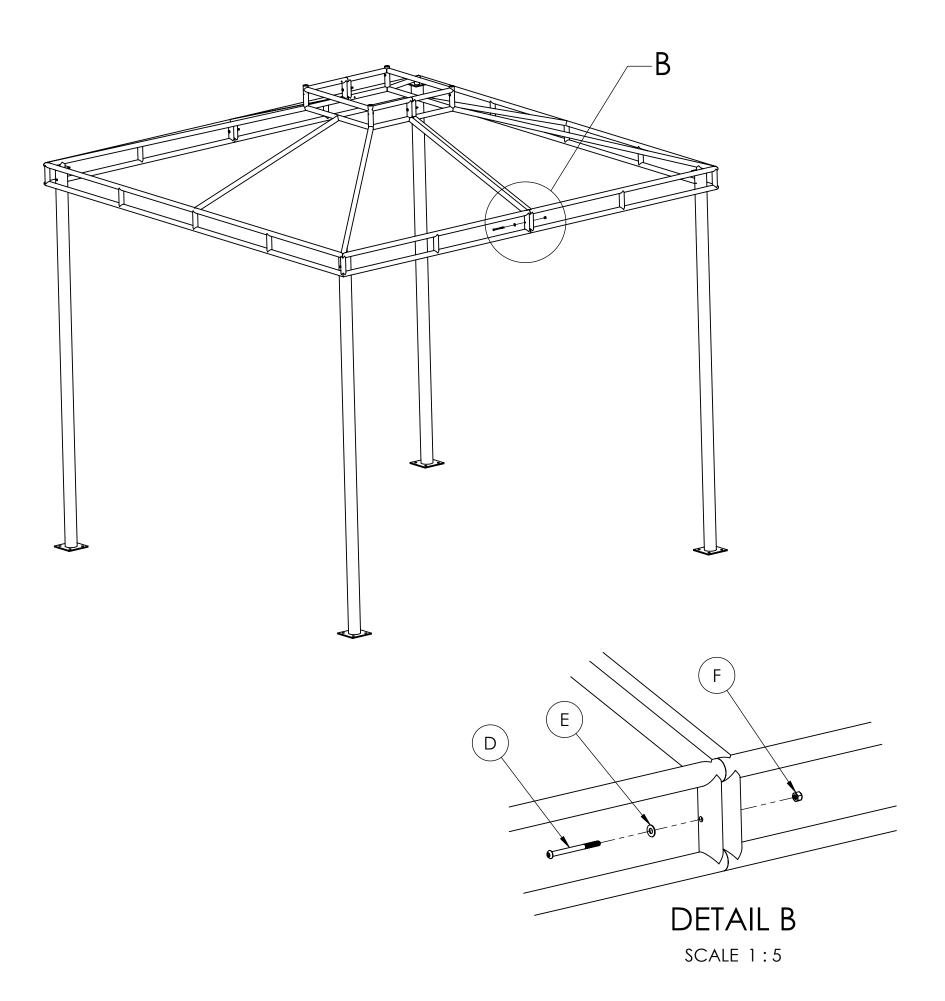

NOTE: - LOCATE (4) SCREW HOLES AND INSERT SCREWS, WASHERS AND FIBER NUTS (AS SHOWN)



OASIS VENTED CABANA 10' X 10" (SF-3801-656-10 IM) STEP 4 G **DETAIL C** SCALE 1:4

NOTE:

- BEFORE PLACING COPULA ON VENTED ROOF PLACE ANCHOR PLATE ON TO ANCHOR SCREWS. (WHICH SHOULD BE PLACED ALREADY ON GROUND)
- LOCATE (4) SCREW HOLES AND PLACE HHDS #10 X 1" LG IN HOLES AND TIGHTEN.